


Compass Calibration Procedure

1. Press the 'Menu/OK Button'. The 'Home' page will be displayed on the display panel as shown below.

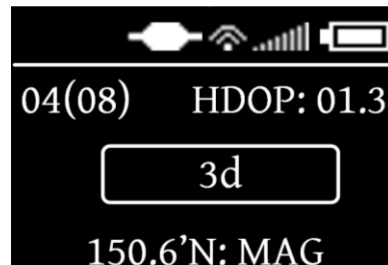


2. Navigate to the 'Settings' page by using up or down arrows.
3. Press the 'Menu/OK Button' to enter the 'Settings' page.




4. Navigate to 'Compass' option by using up or down arrows.




5. Press the 'Menu/OK Button' to enter the 'Compass' page.
6. Navigate to 'Calibrate' option by using up or down arrows.

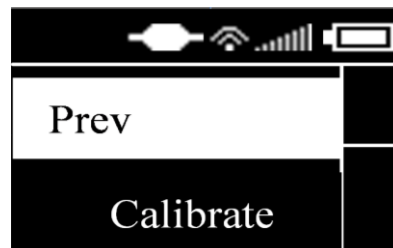

7. Press the 'Menu/OK Button' to start the Compass Calibration routine.

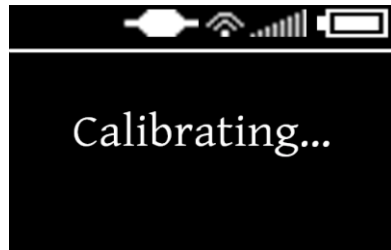

8. Once the calibration routine starts hold the FotoMapr-W100 in both hands with the display pointing the user. Then start rotating 360 degrees along the 'Z' axis followed by 360 degrees along the 'X' axis as shown below.

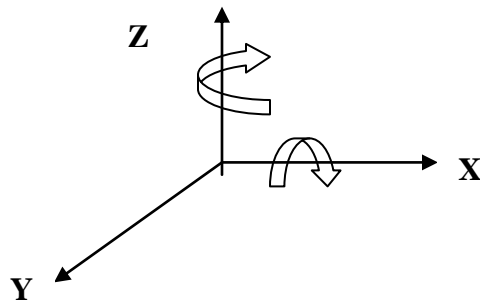

9. After completing rotation along the 'X' and 'Z' axis, press the 'Menu/OK' button to stop the calibration routine.
10. Double Press the 'Menu/OK' button to come to the 'Main Menu'. Then navigate to the home screen to see the calibrated compass values.